

A

accessing
 Cluster Mangement 2-17
 command modes 2-30
 CVSM 2-8, 3-14
 CVSM from visual stack 3-13
 MIB files 2-39
 MIB objects 2-38
 MIB variables 2-39
 address aging time 3-69
 address count, secure 3-77
 address management, illustrated 3-68
 address resolution 3-64
 address security violations 3-76
 address table
 aging time, configuring 3-69
 dynamic entries, removing 3-70
 MAC 3-66
 secure addresses
 adding 3-71
 removing 3-71
 secured port, defining 3-76
 static addresses
 adding 3-74
 removing 3-75
 addresses
 dynamic
 aging time 3-69
 default aging 3-88
 described 3-66
 removing 3-70
 secure
 adding with CLI 3-71
 described 3-70
 removing with CLI 3-71
 static
 adding with CLI 3-74
 configuring (EtherChannel) 3-73

described 3-72
 removing with CLI 3-75
 administrative information 4-25
 aggregation
 enterprise workgroup 1-7
 small-to-medium business workgroup 1-9
 aging time
 changing address 3-69
 defining 3-69
 aging, accelerating 3-88
 alarms, RMON 3-109
 ARP table
 address resolution 3-64
 illustrated 3-65
 managing 3-64
 ATM ports
 settings for 3-22
 VLAN membership 3-102
 authentication, enabling NTP 3-48
 autonegotiation
 connecting to devices without 3-22
 mismatches 5-1, 5-2

B

bandwidth, graphing 2-26
 Beginning 3-85
 broadcast messages, configuring for 3-48
 broadcast storm control
 disabling 3-36
 enabling 3-35
 browsers
 configuring
 Internet Explorer 2-4
 Netscape Communicator 2-4
 supported versions 2-3

- buttons
 - Cluster Builder 2-20
 - Cluster Management 2-17
 - Cluster Manager 2-27
 - Cluster View 2-23
 - CVSM 2-8, 2-10
 - Network View 2-14
- bytes, graphing 4-38, 4-40

C

- candidates
 - adding 4-2
 - automatically discovering 4-6
 - displaying 2-18
 - requirements 4-3
- Caution described xiv
- CDP
 - configuring 3-79, 3-81
 - illustrated 3-80
- CGMP
 - controlling management packets with 3-82
 - Fast Leave, disabling with CLI 3-84
 - Fast Leave, enabling with CLI 3-84
 - illustrated 3-83
- Cisco Discovery Protocol. See CDP
- Cisco Group Management Protocol. See CGMP
- Cisco Systems access page 2-10
- Cisco Visual Switch Manager. See CVSM
- CiscoWorks 2-39
- CLI
 - accessing 1-6
 - error messages 2-35
 - upgrading
 - 1900 and 2820 member switches 4-30
 - 2900 and 3500 member switches 4-29
 - single switches 3-42
 - using 2-29

- Cluster Builder
 - adding and removing members 4-12
 - arranging and saving the device layout 4-16
 - automatic discovery of candidates 4-6
 - changing the host name 4-25
 - changing the polling interval 4-17
 - displaying port connection information 4-25
 - illustrated 4-13
 - saving configuration changes 4-20
 - Suggested Candidate window 4-6
 - using 2-18
- Cluster Management
 - described 2-1, 4-1
 - using 2-16
- Cluster Manager
 - administrative information 4-25
 - changing the host name 4-25
 - changing the polling interval 4-20
 - configuring ports 4-21
 - configuring SNMP 4-31
 - displaying 2-20, 2-23
 - displaying VLAN membership 4-26
 - monitoring port status 4-20
 - saving configuration changes 4-20
 - upgrading groups of switches 4-27
 - using 2-25
- Cluster View
 - arranging and saving the device layout 4-16
 - displaying 4-14
 - saving configuration changes 4-20
 - using 2-22
- clusters
 - community string changes 4-9
 - creating 2-18, 4-11
 - described 4-1
 - disqualification code 4-14
 - host name changes 4-8
 - management VLAN
 - changing on candidates 4-5
 - changing on existing clusters 4-4
 - guidelines before changing 3-55

- requirements 3-54
- managing 2-41, 4-1, 4-18
- members
 - adding and removing with Cluster Builder 4-12
 - managing with CLI 2-33
 - removing with CLI 4-15
- naming 3-16
- password changes 4-10
- command modes 2-30
- command switch 4-1
 - and management 1-6
 - and managing with SNMP 2-41
 - configuration conflicts 5-12
 - defined 1-3
 - enabling 3-16, 4-11
 - recovering
 - from a failure 5-7
 - from lost member connectivity 5-12
 - replacing
 - with another switch 5-10
 - with cluster member 5-7
- command-line error messages 2-35
- commands
 - ? 2-34
 - abbreviating 2-35
 - copy running-config startup-config 2-38
 - list of available 2-31
 - no 2-35
 - rcommand 2-33
 - resetting to defaults 2-35
 - show cluster 2-33
- community strings
 - changes to 4-9
 - configuring 4-31
 - entering 3-61
 - SNMP 2-41, 4-9
- configuration
 - conflicts, managing 3-7, 5-12
 - guidelines, port 3-22
 - multiple port 4-24
 - saving changes through Cluster Management 4-20
 - saving cluster 2-17, 4-20
 - saving to Flash memory 2-38
 - single port 4-22
 - SNMP, illustrated 3-60
 - startup, saving changes to 3-8
- configuration file, saving 3-39
- configuring
 - broadcast messages 3-48
 - CDP 3-79, 3-81
 - community strings 3-61, 4-31
 - devices with Cluster Manager 2-25
 - flooding controls 3-31
 - hello time 3-94
 - Internet Explorer 2-4, 2-6
 - IP information 3-49
 - logging 3-106
 - management VLAN
 - through console connection 3-55
 - through Telnet 3-56
 - member switches 2-33
 - Netscape Communicator 2-4
 - NTP 3-46
 - port parameters 3-22
 - ports
 - through Cluster Manager 4-21
 - through CVSM 3-17, 3-19
 - through visual stack 3-13
 - ports (Mode button) 2-11
 - preferences in Cluster Management 2-18
 - SNMP 3-59, 4-31
 - static addresses (EtherChannel) 3-73
 - STP 3-87
 - switch 3-16
 - Telnet 2-36
 - traps 3-61, 4-35
- conflicts
 - configuration 3-7, 5-12
 - during upgrade 3-42
- connecting to devices without autonegotiation 3-22

- connection information
 - Cluster Builder information 4-25
 - displaying 2-13
 - switch network view information 3-11
- conventions
 - command xii
 - Note and Caution xiv
 - text xii
- copy running-config startup-config command 2-38
- creating
 - clusters 4-5, 4-11
 - VLANs 3-100
- Current Multicast Groups table 3-86
- CVSM
 - accessing 2-8
 - accessing the home page 3-14
 - buttons 2-8
 - conflicts while upgrading 3-42
 - home page, illustrated 3-15
 - menu options 2-11, 2-12
 - monitoring port settings 3-16
 - using 2-8

D

- date, setting 3-44
- daylight saving time 3-46
- defaults, resetting to 2-35
- deployment examples 1-7
- destination-based forwarding 3-27
- destination-based port groups 3-25, 3-73
- device arrangement 4-37
- device layout, arranging and saving 4-16
- device reports
 - displaying 2-16, 4-42
 - illustrated
 - configuration information 4-43
 - port information 4-45
 - system information 4-44

- disabling
 - broadcast storm control 3-36
 - CDP 3-79
 - CGMP Fast Leave 3-84
 - network port 3-34
 - port security 3-78
 - SNMP 3-60, 4-31
 - STP 3-88
 - Switch Port Analyzer 3-30
- disqualification code for clusters 4-14
- documentation, related xiii
- domain name
 - described 3-57
 - specifying 3-58
- Domain Name System (DNS) server 3-57, 3-58
- duplex
 - configuration guidelines 3-22
 - displaying with stack view 3-13
 - setting
 - with CLI 3-23
 - with Cluster Manager 4-21
 - with CVSM 3-19
- dynamic addresses
 - accelerated aging 3-88
 - changing the aging time 3-69
 - removing 3-70

E

- enable password 2-32
- enable secret password 2-32
- enabling
 - broadcast storm control 3-34, 3-35
 - CGMP Fast Leave 3-84
 - command switch 4-6, 4-11
 - flow control 3-21
 - network port 3-33
 - NTP authentication 3-48
 - port security 3-76, 3-78

- ports 3-19
- SNMP 3-60, 4-31
- STP Port Fast 3-97
- Switch Port Analyzer (SPAN) 3-28
- traps 4-35
- Enterprise Edition Software
 - features 1-3
 - upgrading to 1-1
- enterprise workgroup aggregation 1-7
- error messages 2-35
- errors, graphing 4-38, 4-42
- EtherChannel port groups
 - configuring static address for 3-73
 - creating 3-25
- Ethernet statistics, RMON 3-109
- events, RMON 3-109
- examples, deployment 1-7

F

- failures, command switch 5-7
- Fast EtherChannel port groups, creating 3-25
- Fast Leave
 - defined 3-82
 - disabling 3-84
 - enabling 3-84
- features
 - Cluster Management interface 2-17
 - conflicts between 2-29
 - default settings 3-2
 - Enterprise Edition Software 1-3
 - graphing 2-41
 - IOS 1-2, 3-1
 - management interface 2-1
 - port, conflicting 3-7
- filenames, Flash memory 3-39
- files, Flash memory 2-37
- firmware, upgrading 3-39

- Flash memory
 - saving configuration 2-38
 - specifying filenames 3-39
 - working with files in 2-37
- flooded traffic, reducing 3-36
- flooding controls
 - configuring 3-31
 - illustrated 3-32
- flow control
 - configuring with CLI 3-24
 - configuring with CVSM 3-21
- forwarding
 - controlling (SNMP) 2-41
 - restrictions 3-27
 - resuming 3-37
 - source-based, illustrated 3-26
- forwarding delay
 - changing 3-95
 - defined 3-90
- forwarding map, static address 3-72, 3-73
- forwarding port groups 3-25
- FTP, accessing MIB files 2-39

G

- get-next-request operation 2-40
- get-request operation 2-40
- get-response operation 2-40
- Gigabit Ethernet
 - connecting to 3-22
 - port settings 3-22
- global configuration mode 2-31
- graphs
 - bandwidth 2-26
 - link utilization 4-37
 - percent utilization 4-40
 - prerequisites for 2-41
 - total bytes sent and received on link 4-40
 - total errors on link 4-42

total number of packets sent on link 4-41

H

hardware

PC requirements 2-2
supported switches 1-3

hello time

changing 3-94
configuring 3-94
defined 3-90

help command 2-34

history statistics, RMON 3-109

hold-time, modifying 3-85

home page

CVSM, displayed 3-15
switch 3-14

host name

changes to 4-8
changing 4-25
entering 2-26
to address mappings 3-57

HTML interfaces 1-5

HTTP 2-2

I

interface configuration mode 2-31

interface features, Cluster Management buttons 2-17

interfaces

IOS supported 1-5
web-based 1-5

Internet Explorer, configuring 2-4, 2-6

IOS

command-line interface, accessing 1-6
deployment examples 1-7
features 1-2
hardware supported 1-4

interfaces supported 1-5

switching features, changing 3-1

IP addresses

discovering 3-64
member switches 2-1
removing 3-53

IP information

assigning 3-52
configuring 3-49
management VLAN 3-55, 3-56
removing 3-53

IP management packets, controlling 3-82

IP Management, illustrated 3-50

IP setup program 5-8, 5-10

L

LEDs

changing mode 2-11, 2-25
Cluster Manager 4-20
monitoring 3-16, 3-17
visual stack colors 3-12

line configuration mode 2-31

link

errors, graphing 4-42
graph, illustrated 4-39
utilization graphs 4-37

link reports, displaying in Network View 2-13

live images

displaying in Cluster Manager 2-25
displaying in visual stack 2-14

location, entering 2-26, 4-25

logging 3-106

M

MAC address

adding secure 3-70

- aging time 3-69
- discovering 3-64, 3-67
- tables, managing 3-66
- management interface features 2-1
- management VLAN
 - changing on candidate switches 4-5
 - changing on existing clusters 4-4
 - characteristics 3-54
 - cluster requirements 3-54
 - configuring
 - through console 3-55
 - through Telnet 3-56
 - guidelines before changing 3-55
- map, static address forwarding 3-72
- member switches
 - defined 1-3, 4-1
 - IP addresses 2-1
 - recovering from lost connectivity 5-12
- messages 2-35
- MIB files, accessing with FTP 2-39
- MIB objects, accessing 2-38
- MIB variables, accessing 2-39
- Microsoft Internet Explorer. See Internet Explorer
- mismatches, autonegotiation 5-1, 5-2
- Mode button, configuring ports with 2-11
- modes, accessing command 2-30
- monitoring
 - devices with Cluster Manager 2-25
 - LEDs 3-16, 3-17
 - port status 3-12, 4-20
 - ports 3-16, 3-28
 - traffic 3-28
- multicast groups
 - described 3-82
 - removing 3-86
- multicast packets. See flooding controls
- multi-VLAN ports
 - assigning to VLANs 3-104
 - described 3-102, 3-103

N

- Network Management System (NMS) 2-39
- network ports
 - disabling 3-34
 - enabling 3-33
- Network Time Protocol. See NTP
- Network View
 - buttons 2-14
 - described 2-1
 - displaying 3-9
 - managing switches with 3-8
 - page 3-10
 - stack 3-8
 - using 2-13
- NMS 2-39
- Note described xiv
- NTP
 - authentication 3-48
 - broadcast-client mode 3-48
 - client 3-47
 - described 3-46
 - illustrated 3-47

O

- operating systems, supported 2-3
- order, switch 4-37

P

- packets
 - See also traffic
 - controlling management (CGMP) 3-82
 - graphing 4-38, 4-41
- passwords
 - candidate switch 4-7

- changes to 4-10
- changing 3-14
- community strings 3-61
- configuring for Telnet 2-36
- recovery 5-4
- setting 2-32
- path cost 3-96
- PC requirements 2-2
- polling interval
 - graphing 4-17
 - port status monitoring 4-20
 - setting 2-18
- Port Configuration page 3-20
- Port Fast
 - enabling 3-97
 - setting 3-19
- port groups
 - configuring static addresses (EtherChannel) 3-73
 - creating EtherChannel 3-25, 3-27
 - destination based 3-73
 - illustrated 3-26
 - restrictions on forwarding 3-27
 - source-based 3-73
- port security 3-78
- port settings, displaying 2-14
- port status, monitoring 4-20
- ports
 - assigning multi-VLAN 3-104
 - assigning to VLANs 3-102
 - configuration
 - multiple 4-24
 - single 4-22
 - configuration guidelines 3-22
 - configuring 3-17
 - through Cluster Manager 4-21
 - through CVSM 3-19
 - through visual stack 3-13
 - configuring (Mode button) 2-11, 4-20
 - connection information, displaying 3-11
 - duplex
 - checking 3-21
 - setting 3-13, 3-21
 - features, conflicting 3-7
 - flooded traffic 3-37
 - mismatches 5-2
 - monitoring 3-16, 4-20
 - parameters, configuring 3-22
 - resume normal forwarding 3-37
 - secure 3-77
 - secured 3-76
 - security
 - described 3-76
 - disabling 3-78
 - enabling 3-78
 - illustrated 3-77
 - settings
 - correcting 5-3
 - displaying 3-20, 4-23
 - speed
 - checking through Cluster Manager 4-22
 - checking through CVSM 3-21
 - checking through visual stack 3-13
 - setting through Cluster Manager 4-22
 - setting through CVSM 3-21
 - setting through visual stack 3-19
 - status, monitoring 3-12, 4-20
 - STP parameters, changing 3-95
- portsconnection information, displaying 4-25
- priority 3-96
- privilege levels
 - mapping on member switches 4-10
 - setting 2-32
- privileged EXEC mode 2-30
- publications, related xiii

R

- rcommand 2-33
- recovery procedures 5-3
- redundancy 3-88

- reload options, system 3-40
- remote devices, connecting to 3-22
- remote monitoring 3-109
- reports
 - device 2-13, 4-42
 - link 2-13, 2-16
- RMON 3-109
- router hold-time, modifying 3-85

S

- saving
 - cluster configuration 2-17, 4-20
 - configuration file 3-39
 - layout of switch icons 2-20, 2-23
 - startup configuration changes 3-8
- secure address count, defining 3-77
- secure addresses
 - adding 3-70, 3-71
 - removing 3-71
- secure ports 3-76
 - address-security violations 3-76
 - disabling 3-78
 - enabling 3-78
 - maximum secure address count 3-77
- security
 - levels, defining 3-107
 - port 3-76, 3-77
 - violations, address 3-76
- set-request operation 2-40
- setting
 - date and time 3-44
 - passwords 2-32
 - privilege levels 2-32
 - time 3-46
- settings
 - configuring duplex 3-22
 - correcting port 5-3
 - port, displaying 2-14, 2-25

- setup program 5-8, 5-10
- small-to-medium business workgroup aggregation 1-9
- SNMP
 - accessing MIB variables with 2-39
 - changes to community strings 4-9
 - configuration, illustrated 3-60
 - configuring community strings
 - member switches 4-31
 - single switch 3-61
 - configuring on
 - cluster members 4-31
 - single switch 3-59
 - configuring traps
 - member switches 4-35
 - single switch 3-61
 - defined 2-39
 - enabling and disabling 3-60, 4-31
 - management 2-38
 - managing clusters with 2-41
 - network management platforms 1-6
 - trap types
 - in Cluster Manager 4-35, 4-36
 - in CVSM 3-62
- SNMP Manager, illustrated 4-33
- software
 - recovery procedures 5-3
 - upgrading
 - a single switch 3-39
 - groups of switches 4-27
 - with CLI 3-42
 - with CVSM 3-41
- source-based forwarding 3-27
- source-based port groups 3-25, 3-73
- SPAN
 - described 3-28
 - disabling with CLI 3-30
 - enabling with CLI 3-30
- Spanning-Tree Protocol. See STP
- speed
 - checking port 3-13, 4-20
 - setting 3-23, 4-22

- startup configuration, saving 3-8
- static address
 - forwarding map 3-72, 3-73
 - forwarding restrictions 3-27
- static addresses
 - adding 3-74
 - configuring for EtherChannel port groups 3-73
 - described 3-72
 - removing 3-75
- static-access ports
 - assigning to VLANs 3-103
 - described 3-102
- statistics, RMON 3-109
- status, monitoring port
 - with Cluster Manager 4-20
 - with CVSM 3-16
 - with stack view 3-12
- STP
 - BPDU message interval 3-93
 - described 3-87
 - disabling 3-88
 - enabling Port Fast feature 3-97
 - forwarding delay timer 3-95
 - hello BPDU interval 3-94
 - illustrated 3-91, 3-97
 - implementation type 3-92
 - number of supported instances 3-101
 - path cost 3-98
 - port parameters, changing 3-95
 - port priority 3-99
 - redundant connectivity 3-88
 - switch priority 3-92
 - unpredictable behavior 3-104
 - VLAN parameters described 3-89
- STP Port Fast 3-97
- Suggested Candidate window 4-6
- switch home page 3-14
- Switch Network View. See Network View
- switch order 4-37
- Switch Port Analyzer (SPAN)
 - disabling 3-30

- enabling 3-28
- illustrated 3-29
- syslog messages 3-107
- system
 - configuration 3-40
 - date and time, setting 3-44
 - reload options, entering 3-40
 - up time, displaying 2-26

T

- Telnet
 - configuring 2-36
 - connections to cluster members 2-33
 - starting 2-37
- time
 - daylight saving 3-46
 - setting 3-44
- time zones 3-45
- traffic
 - blocking flooded 3-36, 3-37
 - monitoring 3-28
 - reducing flooded 3-31, 3-33
- trap managers, adding 3-61, 3-63
- trap operation 2-40
- traps, enabling 4-35
- troubleshooting
 - IOS 5-1
 - with CiscoWorks 2-39

U

- unicast packets. See flooding controls
- UNIX workstation requirements 2-2
- upgrading
 - 1900 and 2820 member switches 4-30
 - 2900 and 3500 member switches 4-29
 - conflicts while 3-42

- groups of switches 4-27
- software with CLI 3-42
- software with CVSM 3-41
- to Enterprise Edition Software 1-1
- user EXEC mode 2-30
- user settings 2-18, 4-17
- utilization graphs 4-37

- web-based management, using 2-2

X

- XMODEM protocol 5-3

V

- visual stack
 - accessing CVSM 3-13
 - described 3-8
 - displaying 3-11
- VLAN database mode 2-31
- VLAN ID, discovering 3-64, 3-67
- VLANs
 - See also management VLAN
 - aging dynamic addresses 3-88
 - changing STP parameters 3-89
 - creating and maintaining 3-100
 - described 3-101
 - membership
 - ATM port 3-102
 - displaying 2-26, 4-26
 - illustrated 3-100
 - multi-VLAN ports
 - assigning 3-104
 - defined 3-102
 - number supported 3-101
 - overlapping 3-103
 - static-access ports
 - assigning 3-103
 - defined 3-102

W

- web-based management tools 2-1

